

Instent Max Instruction Sheet



OPENING THE INSTENT MAX

1. Remove the shelter from the bag. Spread the floor of the sun shelter evenly on the ground. See figure 1.
2. Hold the two pieces of cord over the center hub of the structure. See figure 2.
3. Still holding the cords, use your free hand to give the sun shelter a shake, loosening and fanning out the structure. Hold and steady the center hub pulling the two cords simultaneously with your other hand in an upward direction. The lower half of the hub will be pulled up to join the top half. See Figure 3.

NOTE: do not force this stage of assembly, as it may damage the opening mechanism. If the shelter is resistant to opening, simply lower the mechanism, gently shake and try again.

NOTE: Do not force this stage of assembly, as it may damage the opening mechanism. If the shelter is resistant to opening, simply lower the mechanism, gently shake and try again. Damage resulting from forcing the mechanism is not covered under the warranty.

4. The shelter is now erect and ready to use. To keep the sun shelter secure in strong wind, fill the attached pockets with sand. You may also use plastic stakes if necessary. **Also tie bow with the rope at the top of hub. (This will stop tent from collapsing)**



FIGURE 1



FIGURE 2



FIGURE 3

TO COLLAPSE THE SHELTER

1. Remove stakes and empty any sand from sand pockets. Untie bow if you have tied loop.
2. Place your hands on either side of the lower hub poles and gently push down until the hub collapses into the vertical position. See figure 4.

NOTE: Do not force the lower hub poles or attempt to collapse the Instent in any other place but at the lower poles. Damage resulting from incorrectly collapsing shelter is not covered under warranty.

3. Very gently roll the fabric around the collapsed structure, pushing air out as you do. Pack the shelter into its bag.



FIGURE 4

**WARNING: DO NOT USE IN STRONG WINDS
THIS PRODUCT IS NOT A WIND SHELTER**